

Installation Instructions

安裝說明書

REAR TRACK BAR RELOCATION BRACKET

後橫連桿墊高座

#Q0483

Application 適用車型

JEEP WRANGLER JK

Components 內含配件


- ① Track bar bracket 橫連桿加高座.....1pcs
- ② Axle tube clamp bracket 對鎖固定架.....1pcs
- ③ Spacer 套管 (25x14.7x41).....1pcs
- ④ Bolt 螺絲 (M14x2.0x80).....1pcs
Nut 螺帽 (M14x2.0-22x14).....1pcs
Washer 華司 (28x15x2.5).....2pcs
- ⑤ Bolt 螺絲 (M10x1.25x120).....2pcs
Nut 螺帽 (M10x1.25-14x10).....2pcs
Washer 華司 (20.8x10.7x2).....4pcs

Caution 注意事項


- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明


1. Remove the track bar from the axle .
將後橫拉桿卸下車軸。
2. Remove the LH rear lower arm axle side mounting bolts.
將左側後下控制臂輪軸端的固定螺絲拆下。
3. Place the new relocation bracket over the factory track bar axle side mounting.
將墊高座支架置於原本的橫連桿鎖點上。
4. Install supplied 14mm spacer to the hole where the track bar was originally located on using factory hardware.
使用原廠螺絲及螺帽，將附件14mm套管安裝至原本橫連桿的鎖孔。

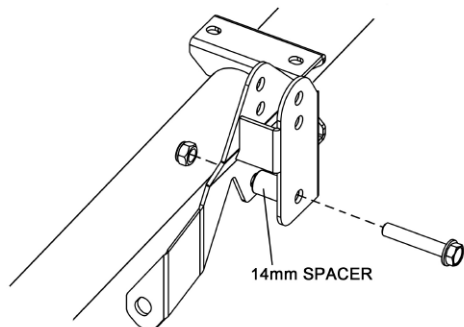

5. Install the axle tube clamp bracket using supplied M10 bolts, nuts and washers.
使用附件M10 螺絲、螺帽及華司 安裝軸外殼對鎖固定架。

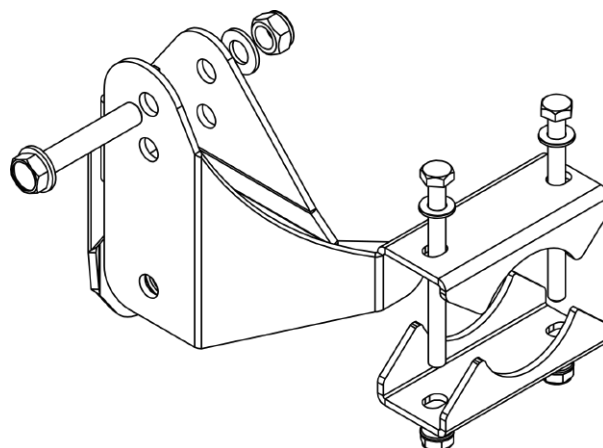

6. Reinstall the LH rear lower arm mounting bolts.
將左側後下控制臂的固定螺絲鎖上。

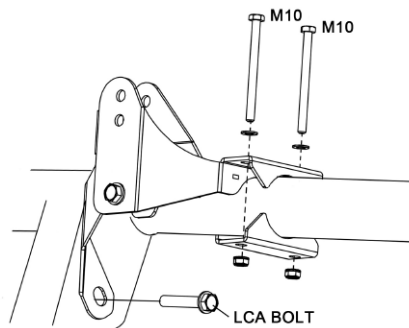

7. Install the track bar to the new relocation bracket using supplied M14 bolt, nut and washers .
使用附件M14螺絲、螺帽及華司，將橫連桿安裝至墊高座。



Illustration of installed state
安裝完成示意圖